

## PHILIPS REMOTE USER INSTRUCTIONS

### Please follow these instructions 100%

Please use the remote at a distance of approx 1 to 2 meters from the player and avoid using it in bright sunlight.

1. Simply have the unit switched on saying **NO DISC**. If you have a DVD Recorder then you have to change it's "remote configuration" or "Default IR Device" from "DVD Recorder" to "DVD Player" (consult your user manual) don't forget to change this setting back when you have completed the upgrade.
2. Put the batteries into the upgrade remote, aim the Upgrade Remote at the dvd player / recorder and press the button.



The Player / Recorder will display a series of dashes like this -----.

3. Now you must enter a code using your original remote control.


For DVD Players the code is 222222 005 255 PLAY

For DVD Recorders the code is 121212 005 255 PLAY

The Player / Recorder should now say **NO DISC**, switch the power off and unplug it from the mains for at least 10 seconds, when you switch it back on the unit will be Multiregion

**If the upgrade does not seem to have worked please visit the following link.**

**[www.dvdchips.co.uk/aftersaleshelp](http://www.dvdchips.co.uk/aftersaleshelp)**

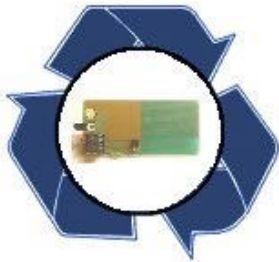

**VOLUNTARY REMOTE RECYCLING SCHEME**

Please help us to achieve our recycling target by returning used remotes after use. Please re-use the same bag that the remote arrived in, simply re-seal with sticky tape and attach the correct address label below.

Thank you for taking part in this voluntary recycling scheme.

**UK RETURNS – NO POSTAGE REQUIRED**

**NON UK RETURNS – POSTAGE REQUIRED**

**Freepost RLSR-CKXT-TYJY**

**DVD Chips UK**

**PO Box 647**

**Halifax**

**HX1 4ZD**

**DVD Chips UK (Dept RR)**

**20 Spring Hall Place**

**Halifax**

**HX1 4TF**

**United Kingdom**