

PHILIPS REMOTE USER INSTRUCTIONS

Please follow these instructions 100%

1. Simply have the unit switched on saying **NO DISC**. If you have a DVD Recorder then you have to change it's "remote configuration" or "Default IR Device" from "DVD Recorder" to "DVD Player" (consult your user manual) don't forget to change this setting back when you have completed the upgrade.
2. Put the batteries into the upgrade remote , aim the Upgrade Remote at the dvd player / recorder and press the button.



The Player / Recorder will display a series of dashes like this -----.

3. Now you must enter a code using your original remote control.

For DVD Players the code is 222222 005 255 PLAY

For DVD Recorders the code is 121212 005 255 PLAY

The Player / Recorder should now say **NO DISC** , switch the power off and unplug it from the mains for at least 10 seconds, when you switch it back on the unit will be Multiregion