

SONY DAV-DZxxx INSTRUCTIONS

Please follow these instructions 100%

1. Get your player ready to accept the code ... you should first have the player switched on **WITH NO DISC INSIDE** . Now press and hold both the "Stop" and "Eject" keys on the front panel whilst turning the volume control clockwise. The TV should now display the Service Menu or Remocon Diagnosis Menu. You are now ready to do the upgrade.

2. Put the batteries into the upgrade remote, the LED will light to indicate the remote is ready. Aim the upgrade remote at your DVD player and press and hold the button.



The LED on the Upgrade remote will flash 5 times before going out. Wait 2 or 3 seconds after the last flash then release the button on the upgrade remote and then switch the unit into standby using the original remote.

3. Unplug the player from the mains for 5 seconds. That's it ! Plug the player back in and it will be Multi region.