

## SONY NSxx REMOTE USER INSTRUCTIONS

### Please follow these instructions 100%

Please use the remote at a distance of approx 1 to 2 meters from the player and avoid using it in bright sunlight.

1. Get your player ready to accept the code ... you should simply have the player **WITH NO DISC INSIDE** plugged in but in STANDBY (Standby is the "off" state where the unit can be switched back on using the remote – on some models a red light will be on).
2. Put the batteries into the upgrade remote, the LED will light to indicate the remote is ready.
3. Aim the upgrade remote at your DVD player and press and hold the button




The LED on the Upgrade remote will flash 5 times before going out. Your DVD player will also switch on at this time.

4. Using your original remote switch your DVD player back into Standby then unplug it from the mains for 5 seconds. That's it ! Plug the player back in and it will be Multi region.

**If the upgrade does not seem to have worked please visit the following link.**

**[www.dvdchips.co.uk/aftersaleshelp](http://www.dvdchips.co.uk/aftersaleshelp)**

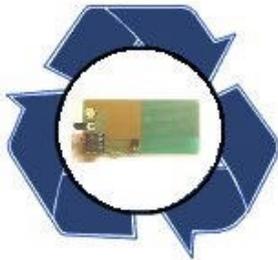

**VOLUNTARY REMOTE RECYCLING SCHEME**

Please help us to achieve our recycling target by returning used remotes after use. Please re-use the same bag that the remote arrived in, simply re-seal with sticky tape and attach the correct address label below.

Thank you for taking part in this voluntary recycling scheme.

**UK RETURNS – NO POSTAGE REQUIRED**

**NON UK RETURNS – POSTAGE REQUIRED**

**Freepost RLSR-CKXT-TYJY**

**DVD Chips UK**

**PO Box 647**

**Halifax**

**HX1 4ZD**

**DVD Chips UK (Dept RR)**

**20 Spring Hall Place**

**Halifax**

**HX1 4TF**

**United Kingdom**